PERKO®

FIVE YEAR LIMITED WARRANTY

PERKO, INC. (PERKO) warrants to the original consumer-purchaser that PERKO'S consumer products will be free from defective materials or workmanship, and that the PERKOPLATE/PERKO•KOTE Finish will remain corrosion-free under normal use and service, for a period of five (5) years from the original purchase date. Products installed as original equipment by a boat builder or manufacturer are limited to one (1) year or the duration of the manufacturer's general accessory warranty, whichever is longer.

ALL IMPLIED WARRANTIES, INCLUDING MERCHANTABILITY, ARE ALSO LIMITED IN DURATION TO THE FIVE YEAR PERIOD FROM THE ORIGINAL PURCHASE DATE.

PERKO SHALL NOT BE LIABLE FOR LOSS OF USE OF ANY OF ITS CONSUMER PRODUCTS, NOR FOR OTHER INCIDENTAL OR CONSEQUENTIAL COSTS, EXPENSES, OR DAMAGES INCURRED BY THE ORIGINAL CONSUMER-PURCHASER OR BY ANY OTHER PERSON.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY OR MAY NOT APPLY TO YOU. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY OR MAY NOT APPLY TO YOU.

This warranty is void if the consumer product warranted has been damaged by accident or unreasonable use, neglect, improper service or other cause not arising out of defects in material or workmanship. Excluded from this warranty are Electric Light Bulbs (lamps), Sealed Beam Units and Fuses.

During the warranty period, your PERKO product will either be repaired or it will be replaced with a like product (at PERKO's option) without charge to the original consumer-purchaser, when returned prepaid and insured, with proof-of-purchase date to PERKO at the address shown below. In the event of replacement, the replacement product will continue the warranty of the original product, or ninety (90) days, whichever is longer.

PERKO does not authorize any person or company to create for it any other obligation or liability in connection with any of its products.

PERKO.INC

16490 N.W. 13TH AVENUE • MIAMI, FL 33169-5707 www.perko.com



PERKO®

8500 Series Battery Selector Switch Installation Instructions



Fig 8501 Selector Switch



Fig 8503
Selector Switch
with Alternator Field
Disconnect



Fig 8502 Selector Switch with Key Lock



Fig 8504
Selector Switch
with Key Lock and
Alternator Field Disconnect

8500INS1 10/14



Cat No. 8501 Series Basic Switch

Cat No. 8502 Series with Key Lock

Cat No. 8503 Series with Alternator Field Disconnect

Cat No. 8504 Series with Lock and Field Disconnect



BATTERY SWITCHES INSTALLATION AND OPERATING INSTRUCTIONS

For use with alternators and generators rated 6-50 V.D.C. switch rating: 250 amperes continuous, 360 intermittent. Locate switch to keep battery cables short as possible.

All wiring to the switch shall be preformed by a QUALIFIED MARINE ELECTRICIAN, and in accordance with the "Fire Protection Standard For Motor Craft", N.F.P.A.* No. 302, The Standards of the American Boat and Yacht Council, Inc.*, and the U.S.C.G.* Safety Standards for Boat Electrical Systems (33 CFR 183)

CAUTION: (1) Make sure connections at terminals No.1 and No. 2 are of the same polarity.


(2) Always STOP engines before switching to "OFF" position. Make-Before-Break feature allows switching between 1-all-2 positions with running engines.

Erratic operation, particularly after very long periods of idleness, can be cleared by rapidly switching back and forth briskly several times with out any load connected.

NOTE: If switch is to be mounted in an area subject to corrosion, it is recommended that a liquid electrical coating be applied to the terminal connections.

OPTIONAL ACCESSORIES

- (1) Key Lock Switch can be locked only in the "OFF" position. Key can be removed in either the locked or unlocked position.
- Alternator Field Disconnect used to break the field current and protect the alternator diodes if the battery switch is inadvertently turned to the "OFF" position with the engine running. Hook-up instructions and applicability are explained in Diagram #4. The following diagram illustrates a typical installation.

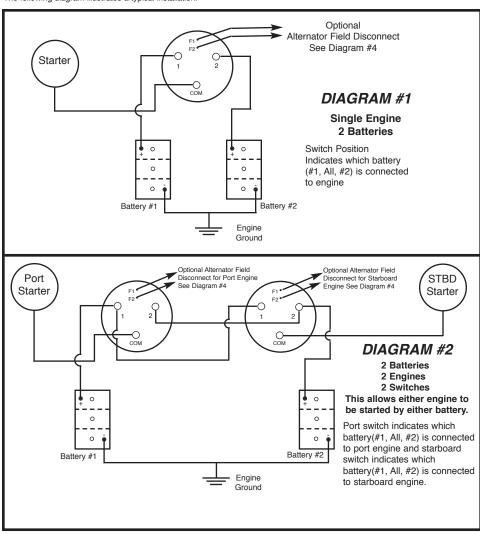



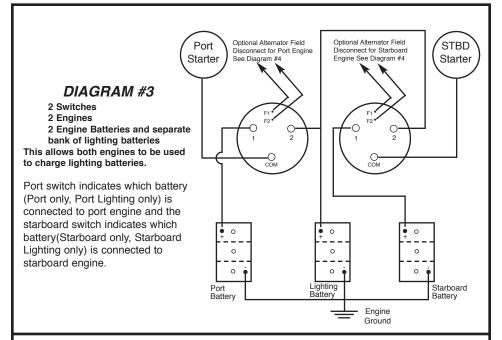


DIAGRAM #4 ALTERNATOR FIELD DISCONNECT

- A. Use minimum 14 awa wire, suitable for use in marine engine compartments.
- B. On systems with separate regulator, splice the field disconnect switch into the field wire "F" as shown:
 - 1. At the Regulator:

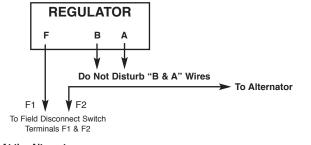

2. At the Alternator:

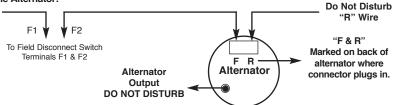

- C. On unitized alternators with built-in regulator a field disconnect cannot be installed.
- 1. American Boat & Yacht Council. Inc. 613 Third Street, Suite 10 Annapolis, MD 21403
- 2. U.S. Coast Guard Washington, D.C. 20593 (or your local C.G. office)
- 3 NFPA 1 Batterymarch Park Quincy, MA 02269